



Network Video Recorder (NVR) Quick Setup Guide

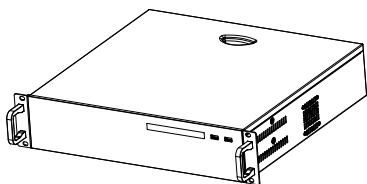

NO:170-15-20-0122-01
Issue:1.0

1 Packing List

 Accessory specifications may vary by country or region. Please refer to the actual product you receive.



Network Video Recorder (NVR) *1



Quick setup guide *1



Power Cord *1



Mouse *1



Alarm block *6



Flat head black screws *4



Mounting bracket *2





Flat head screws *60

2 Device Port

NOTE


Different devices may use different types of ports. The diagram is for reference only, please refer to the actual application scenario.

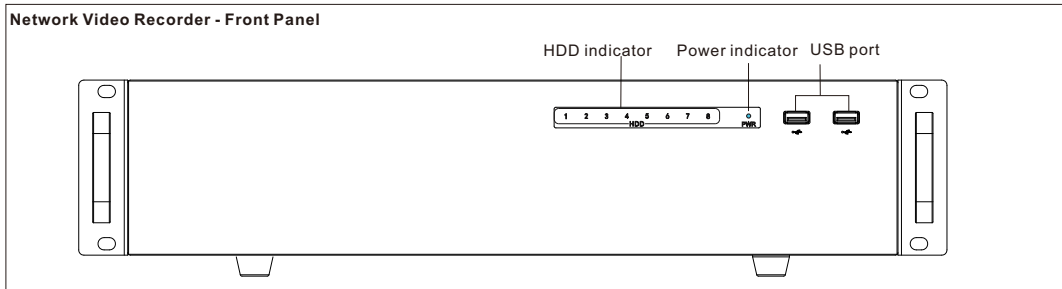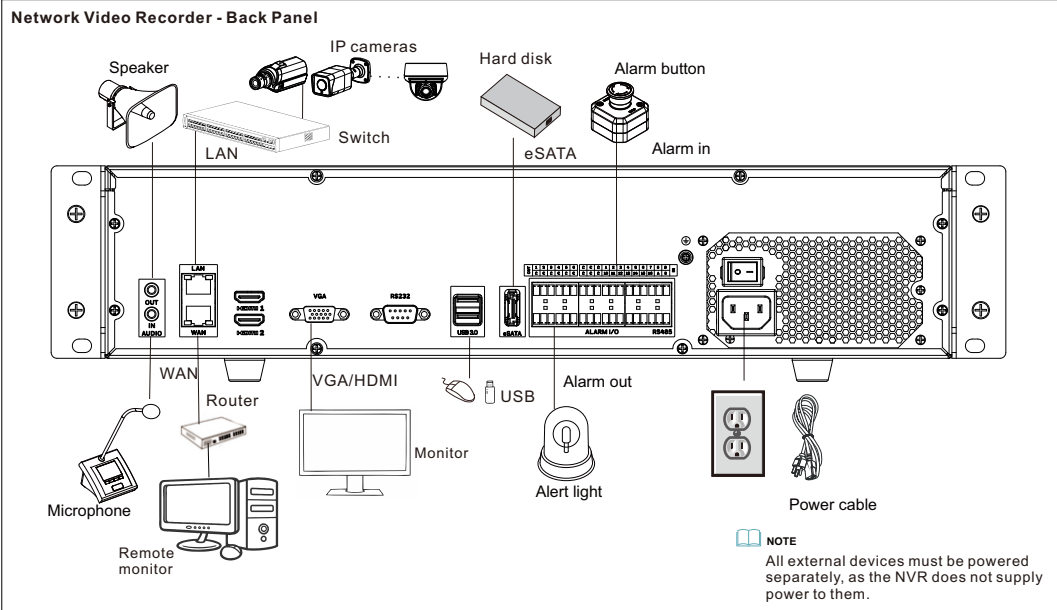

3 Device Dimension


NOTE

Device dimensions may differ across models. The illustrations provided are for reference only.

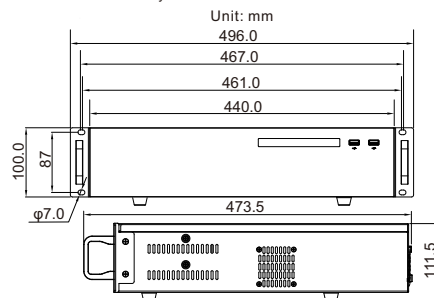


4 Install Hard Disk


1

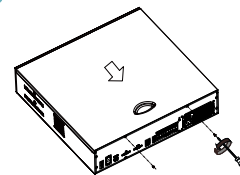


2

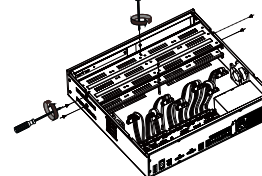


3

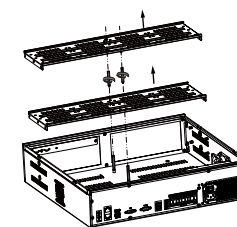


4

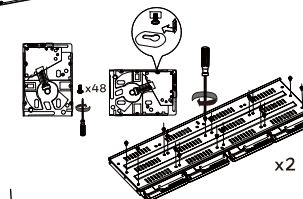


5

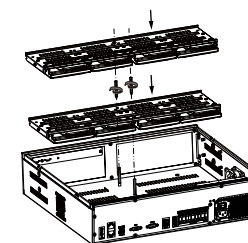


6

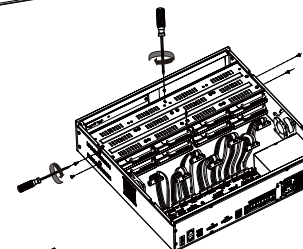


7

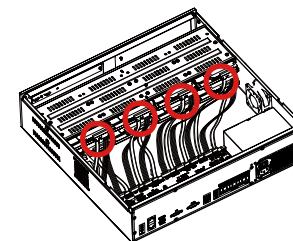

8

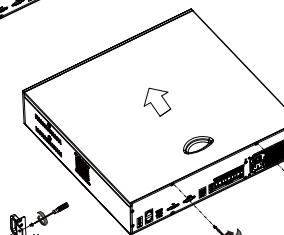

9

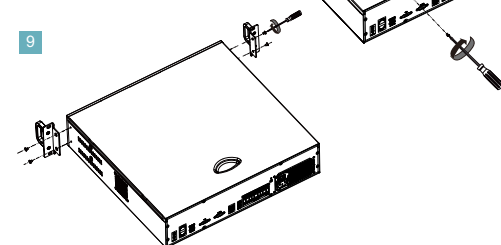

5 Login

1. Ensure the NVR is properly connected to a power supply and that a monitor is correctly connected to the NVR via the HDMI or VGA interface.
2. When powering on the device for the first time, you must activate it.
3. The default username is **admin**.
 - Enter a new password and confirm it.
 - Then enter the **channel default password**, which allows for quick addition of cameras to the NVR.
 - Click **OK** to proceed to the **Pattern Unlock** setup page.

The image shows two side-by-side screenshots of the NVR's initial setup screens. The left screen is the 'Activation' page, which includes fields for Language (set to English), Username (admin), and two password fields: 'Enter a new password' and 'Confirm the new password'. Below these are instructions about password requirements. The right screen is the 'Login' page, showing the same Username field and a Password field, with 'Pattern Unlock' and 'Forgot password' links at the bottom.

4. On the main screen, right-click to open the settings menu as shown in the figure.

5. Set the **Pattern Unlock**. If you do not wish to set a pattern, click **"Skip this step"**.

6. Set your **Email** and **Security Questions** to enable password recovery.


The setup wizard includes configurations for Network, IPv4 CCTV/POE, Date and Time, Time Zone, DST, Camera, Disk, P2P, and Resolution.

For P2P: Search for "InView Pro 5" in the App Store or Google Play to download and install the mobile client. Use the app to scan the QR code located on the back panel of the NVR or found on the P2P settings page within the NVR user interface. Then enter the NVR's password to add the device to the app's device list. You can manage the NVR directly through the mobile client.

This block contains three screenshots from the NVR setup process. The top left is 'Email for recovery user password' with an email field. The top right is 'Question (Recovery the password)' with three questions and answers. The bottom left is the 'Setup Wizard' screen showing a progress bar and a 'Setup Wizard' button. The bottom right is another 'Setup Wizard' screen showing P2P status, a QR code, and app information.

6 UI Settings

On the main page, right-click to open the settings page, as shown in the figure.

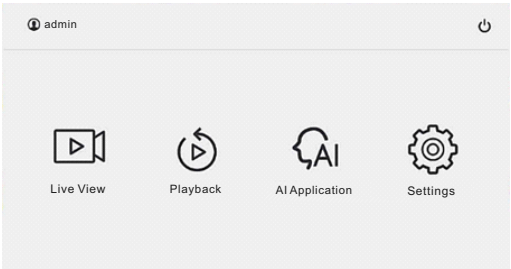

Live View: Click to access the real-time video stream.

Playback: Used to play back recorded video, including fixed-point playback or playback based on search criteria.

AI Application: In the AI Application interface, you can configure **Smart Search** and manage the **Archives Library**.

Settings

Select the Settings menu to configure Channel, Speaker, Record, Event, IVS, Network, and System options.

Channel: Camera, Encode, Image, OSD, Privacy Zone, ROI, Audio, and Intelligent Tracking.

Speaker: Speaker Management, and Local Audio File.

Record: Record schedule, Disk, Storage Mode, S.M.A.R.T, Disk Detection, Disk Calculation, and FTP.

Event: General, Motion Detection, Video Loss, Alarm In, Abnormal Alarm, and Alarm Out.

IVS: AI Multi-Target, Intelligent Analysis, Behavior Analysis, ES Analysis, Face Recognition, LPR, and Local Intelligent Analysis.

Network: Network, 8012.1X, DDNS, Port Mapping, Email, P2P, IP Filter, SNMP, 3G/4G, PPPOE, POE Status, Network Traffic, Platform Access, and Failover.


System: Information, General, User Account, Security Center, Layout, Auxiliary Screen, Logs, Maintenance, and Auto Reboot.

The image shows the 'System' page in the NVR interface. It has a sidebar with 'System' selected. The main area is a table with columns: Channel, Speaker, Record, Event, IVS, Network, and System. The table lists various system parameters like Device ID, Device Name, Device Type, Model, Firmware Version, U-boot Version, Kernel Version, HDD Number, Channels Supported, Alarm In, Alarm Out, Audio In, and Audio Out.

Channel	Speaker	Record	Event	IVS	Network	System
General	Device ID					B011030ADU7P2WJCP
User Account	Device Name					Device
Security Center	Device Type					NVR
Layout	Model					NVR3302E-J
Auxiliary Screen	Firmware Version					V4.7.1625.000.033.0.2.10.0
Logs	U-boot Version					18081505320
Maintenance	Kernel Version					180CC00C23623
Auto Reboot	HDD Number					2
	Channels Supported					32
	Alarm In					6
	Alarm Out					2
	Audio In					1
	Audio Out					1

NOTE
The specific functions may be related to the models, please refer to your actual product.


Real-time Left-click Menu

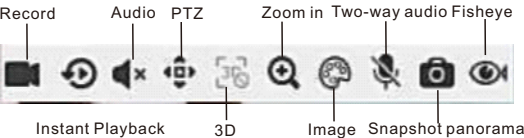

7 Web Accessing

Open the Chrome browser and enter the NVR's IP address (default: 192.168.0.121) into the address bar, then press Enter.

The web interface provides the same functionality as the NVR's local user interface (UI).

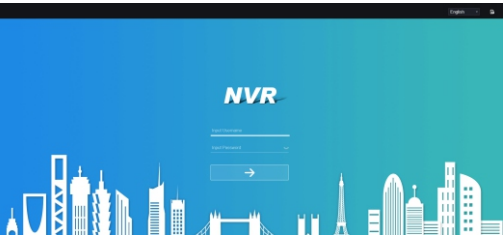

bulbs or direct sunlight), as this may reduce the lifespan of the image sensor.

- Prevent liquids from entering the device. If any liquid accidentally flows into the unit, immediately power it off and disconnect all cables (including power and network cables).
- In areas prone to thunder and lightning, ground the device nearby to safely discharge high-energy surges, such as lightning strikes, to avoid damage.

CAUTION

- Avoid heavy loads, strong vibrations, and exposure to moisture during transportation and storage to prevent damage.
- Note: The warranty does not cover any damage resulting from secondary packaging or transportation after the original packaging has been removed.
- If the device is left disassembled for an extended period, or if it is not properly installed after testing, the sealing performance may be compromised, leading to fogging and malfunction.
- Protect the device from falls and strong impacts.
- Keep it away from magnetic interference and do not install it in locations prone to shaking or mechanical shocks.
- Clean the device using a soft, dry cloth. For stubborn dirt, use a cloth lightly moistened with a mild neutral cleaner, then gently wipe and dry the surface.
- Do not block the ventilation openings.
- Always follow the installation guidelines provided in this document to ensure proper airflow and device safety.
- Keep the device away from heat sources such as radiators, electric heaters, and other heat-emitting equipment.
- Avoid installing the device in environments that are damp, dusty, extremely hot or cold, or exposed to strong electromagnetic radiation.
- If the device is installed outdoors, take proper insect-proof and moisture-proof measures to prevent circuit board corrosion that could affect system performance.
- If the device will remain idle for a long period, remove the power plug to ensure safety.
- Before unpacking the product, inspect the fragile sticker. If the sticker is damaged, contact customer service or your sales representative immediately.
- The manufacturer is not responsible for any artificial damage to the fragile sticker.
- Ensure adequate ventilation to prevent overheating.
- Do not install or disassemble the device in extreme environments including high humidity, high salinity, dust, extreme temperatures, or corrosive atmospheres.

Special Announcement

- All complete products sold by the manufacturer are supplied with nameplates, a quick setup guide, and accessories, and are subject to rigorous inspection prior to delivery.
- The manufacturer is not responsible for counterfeit products.
- This manual is subject to updates in accordance with product feature enhancements or modifications.
- Software and hardware described in this manual may be updated regularly. Update information will be reflected in subsequent versions of this manual without prior notice.
- This manual is for reference only and may contain typographical errors, technical inaccuracies, or minor discrepancies between product functions and operations described versus those of the actual product.
- In the event of any inconsistencies, the actual product shall take precedence and the final interpretation rests with the company.

NOTE

For more detailed information, please refer to the full user manual.

Precautions

Before using this device, thoroughly read and understand this document, and strictly follow all the guidelines provided. If the device is installed in a public area, a clearly visible notice—such as 'You have entered the area of electronic surveillance'—must be displayed. Improper use of electrical products may result in fire or serious injury.

	Indicates a medium or low potential hazard that, if not avoided, could result in minor or moderate injury.
	Indicates a potential risk that, if not avoided, could result in property damage, data loss, reduced performance, or unpredictable outcomes.
	Provides supplementary information to highlight or reinforce key points in the main text.

WARNING

- Strictly comply with local electrical safety standards and use power adapters marked with the LPS (Limited Power Source) standard when installing and operating this device. Failure to do so may result in device damage.
- Follow all installation requirements carefully. The manufacturer is not liable for any device damage caused by failure to adhere to these requirements.
- Only use the accessories provided with this device. Ensure that the power supply voltage meets the device's input voltage specifications.
- If the device is installed in locations with unstable voltage, ensure it is properly grounded to discharge excess energy, such as electrical surges, and prevent damage to the power supply.
- Do not expose the device to intense light sources (e.g., light